



SCHEDA ATTREZZATURA PER MANUTENZIONE POMPE SERIE 47
MAINTENANCE TOOL CHART FOR PUMPS 47 SERIES

PARTICOLARE DA SOSTITUIRE <i>PART TO REPLACE</i>		ATTREZZO ESTRAZIONE <i>REMOVING TOOL</i>			ATTREZZO INSERIMENTO <i>INSERTION TOOL</i>		
CODICE <i>PART NO.</i>	DESCRIZIONE <i>DESCRIPTION</i>	CODICE <i>PART NO.</i>	DESCRIZIONE <i>DESCRIPTION</i>	UTILIZZARE CON <i>USE WITH</i>	CODICE <i>PART NO.</i>	DESCRIZIONE <i>DESCRIPTION</i>	UTILIZZARE CON <i>USE WITH</i>
90162500	OIL SEAL D. 22x32x5,5				26083500	OIL SEAL INSERTION TOOL	
90264200	PACKING D. 16x30x7/4	27179700	PACKING EXTRACTION SOCKET Ø16	USE WITH EXTRACTOR 26019400	26499300	PACKING INSERTION GUIDE	USE WITH DRIVE STUD 26134600
90270500	PACKING D. 20x35x7,5/4,5 H.P.	26093400	PACKING EXTRACTION SOCKET Ø20	USE WITH EXTRACTOR 26019400	26014000	PACKING INSERTION GUIDE	USE WITH DRIVE STUD 26134600
90272500	PACKING D. 22x35x7/4,5 H.P.	26093500	PACKING EXTRACTION SOCKET Ø22	USE WITH EXTRACTOR 26019400	26014000	PACKING INSERTION GUIDE	USE WITH DRIVE STUD 26134600
90274500	PACKING D. 24x35x6/4 H.P.	26093600	PACKING EXTRACTION SOCKET Ø24	USE WITH EXTRACTOR 26019400	26014000	PACKING INSERTION GUIDE	USE WITH DRIVE STUD 26134600
90164800	OIL SEAL D. 30x55x7				26083600	OIL SEAL INSERTION TOOL	