
Menu

Serie 70
KEB

INTERPUMP GROUP

Pratissoli

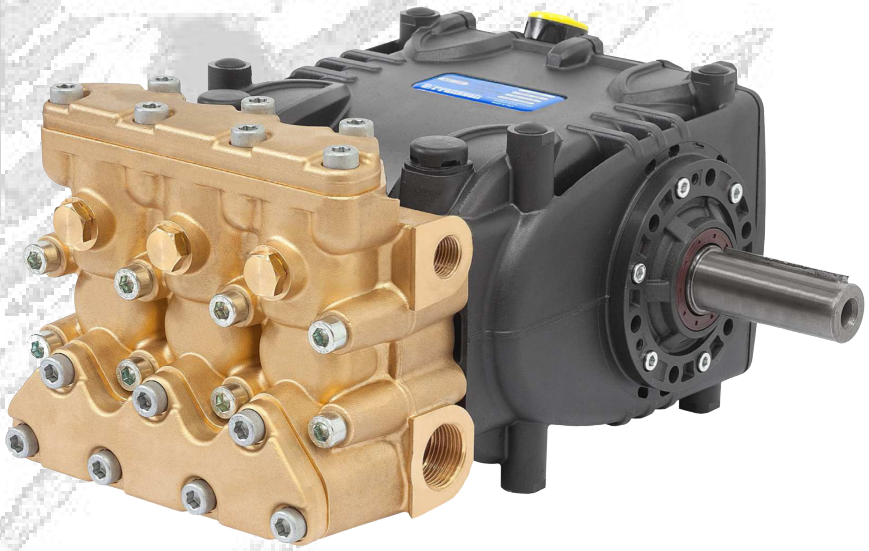

Manuale uso e manutenzione
Use and Maintenance Manual
Manuel d'utilisation et d'entretien
Betriebs- und Wartungsanleitung
Manual de Uso y mantenimiento
Manual de uso e manutenção
Руководство по эксплуатации и техническому обслуживанию
使用和保养手册
دليل الاستخدام والصيانة

Table of Contents

1 INTRODUCTION 20
2 DESCRIPTION OF SYMBOLS 20
3 SAFETY 20
3.1 General safety warnings 20
3.2 Essential safety in the high pressure system 20
3.3 Safety during work 20
3.4 Rules of conduct for the use of lances 20
3.5 Safety during system maintenance 21
4 PUMP IDENTIFICATION 21
5 TECHNICAL CHARACTERISTICS 21
6 DIMENSIONS AND WEIGHT 22
7 OPERATING INSTRUCTIONS 22
7.1 Water temperature 22
7.2 Maximum pressure and flow rate 22
7.3 Minimum rotating speed 22
7.4 Brands and types of oils recommended 23
8 PORTS AND CONNECTIONS 24
9 PUMP INSTALLATION 25
9.1 Installation 25
9.2 Rotation direction 25
9.3 Version change 25
9.4 Hydraulic connections 25
9.5 Pump supply 25
9.6 Suction line 25
9.7 Filtration 26
9.8 Outlet line 27
9.9 Calculation of the internal diameter of the duct pipes 27
9.10 V-belt transmission 28
9.11 Transmission definition 28
9.12 Definition of static pull to apply on belts 30
9.13 Transmission of power from the second PTO 30
10 START-UP AND OPERATION 31
10.1 Preliminary checks 31
10.2 Start-up 31
11 PREVENTIVE MAINTENANCE 31
12 PUMP STORAGE 31
12.1 Long-term inactivity 31
12.2 Method for filling pump with anti-corrosion emulsion or anti-freeze solution 31
13 PRECAUTIONS AGAINST FROST 31
14 GUARANTEE CONDITIONS 32
15 OPERATING FAULTS AND THEIR POSSIBLE CAUSES 32
16 EXPLODED DRAWING AND PARTS LIST 33
17 FLUSHING CIRCUIT DIAGRAM OF USE 35
18 DECLARATION OF INCORPORATION 36

1 INTRODUCTION

This manual describes the instructions for use and maintenance of 70 SERIES - KEB pumps and should be carefully read and understood before using the pump.
Proper pump operation and duration depend on the correct use and maintenance.
Interpump Group disclaims any responsibility for damage caused by negligence or failure to observe the standards described in this manual.
Upon receipt, verify that the pump is intact and complete. Report any faults before installing and starting the pump.

2 DESCRIPTION OF SYMBOLS

Read the contents of this manual carefully before each operation.



Warning Sign



Read the contents of this manual carefully before each operation.



Danger Sign
Danger of electrocution.



Danger Sign
Wear a protective mask.



Danger Sign
Wear protective goggles.



Danger Sign
Put on protective gloves before each operation.



Danger Sign
Wear appropriate footwear

3 SAFETY

3.1 General safety warnings

Improper use of pumps and high pressure systems as well as non-compliance with installation and maintenance standards can cause serious damage to people and/or property.
Anyone assembling or using high pressure systems must possess the necessary competence to do so, knowing the characteristics of the components that will assemble/use and take all precautions necessary to ensure maximum safety in all conditions of use.
In the interest of safety, both for the Installer and the Operator, no reasonably applicable precaution should be omitted.

3.2 Essential safety in the high pressure system

1. The pressure line must always be provided with a safety valve.
2. High pressure system components, particularly for systems that operate primarily outside, must be adequately protected from rain, frost and heat.
3. The electrical control system must be adequately protected against sprays of water and must meet specific regulations in force.
4. The high pressure pipes must be properly sized for maximum operating pressure of the system and always and only used within the operating pressure range specified by the Manufacturer of the pipe itself. The same rules should be observed for all other auxiliary systems affected by high pressure.
5. The ends of high pressure pipes must be sheathed and secured in a solid structure, to prevent dangerous whiplash in case of bursting or broken connections.
6. Appropriate protective casing must be provided in pump transmission systems (couplings, pulleys and belts, auxiliary power outlets).

3.3 Safety during work



The room or area within which the high pressure system operates must be clearly marked and prohibited to unauthorised personnel and, wherever possible, restricted or fenced. Personnel authorised to access this area should first be instructed how to operate within this area and informed of the risks arising from high pressure system defects or malfunctions.
Before starting the system, the Operator is required to verify that:

1. The high pressure system is properly powered, see chapter 9 par. 9.5.
2. The pump suction filters are perfectly clean; it is appropriate to include a device indicating the clogging level on all devices.
3. Electrical parts are adequately protected and in perfect condition.
4. The high pressure pipes do not show signs of abrasion and the fittings are in perfect order.

Any fault or reasonable doubt that may arise before or during operation should be promptly reported and verified by qualified personnel. In these cases, pressure should be immediately cleared and the high pressure system stopped.

3.4 Rules of conduct for the use of lances



1. The operator must always place his safety and security first, as well as that of others that may be directly affected by his/her actions, or any other assessments or interests. The operator's work must be dictated by common sense and responsibility.
2. The operator must always wear a helmet with a protective visor, waterproof gear and wear boots that are appropriate for use and can ensure a good grip on wet floors.

Note: *appropriate clothing will protect against sprays of water but not from direct impact with jets of water or very close sprays. Additional protections may therefore be necessary in certain circumstances.*

3. It is generally best to organise personnel into teams of at least two people capable of giving mutual and immediate assistance in case of necessity and of taking turns during long and demanding operations.
4. The work area jet range must be absolutely prohibited to and free from objects that, inadvertently under a pressure jet, can be damaged and/or create dangerous situations.
5. The water jet must always and only be pointed in the direction of the work area, including during preliminary tests or checks.
6. The operator must always pay attention to the trajectory of debris removed by the water jet. Where necessary, suitable guards must be provided by the Operator to protect anything that could become accidentally exposed.
7. The operator should not be distracted for any reason during work. Workers needing to access the operating area must wait for the Operator to stop work on his/her own initiative, after which they should immediately make their presence known.
8. It is important for safety that all team members are always fully aware of each other's intentions in order to avoid dangerous misunderstandings.

9. The high pressure system must not be started up and run under pressure without all team members in position and without the Operator having already directed his/her lance toward the work area.

3.5 Safety during system maintenance

1. High pressure system maintenance must be carried out in the time intervals set by the manufacturer who is responsible for the whole group according to law.
2. Maintenance should always be performed by trained and authorised personnel.
3. Assembly and disassembly of the pump and the various components must only be carried out by authorised personnel, using appropriate equipment in order to prevent damage to components, in particular to connections.
4. Always only use original spare parts to ensure total reliability and safety.

4 PUMP IDENTIFICATION

Each pump has an identification label, see pos. ① of Fig. 1 which shows:

- Pump model and version
- Serial number
- Max revs
- Absorbed power HP - kW
- Pressure bar - P.S.I.
- Flow rate l/min - Gpm

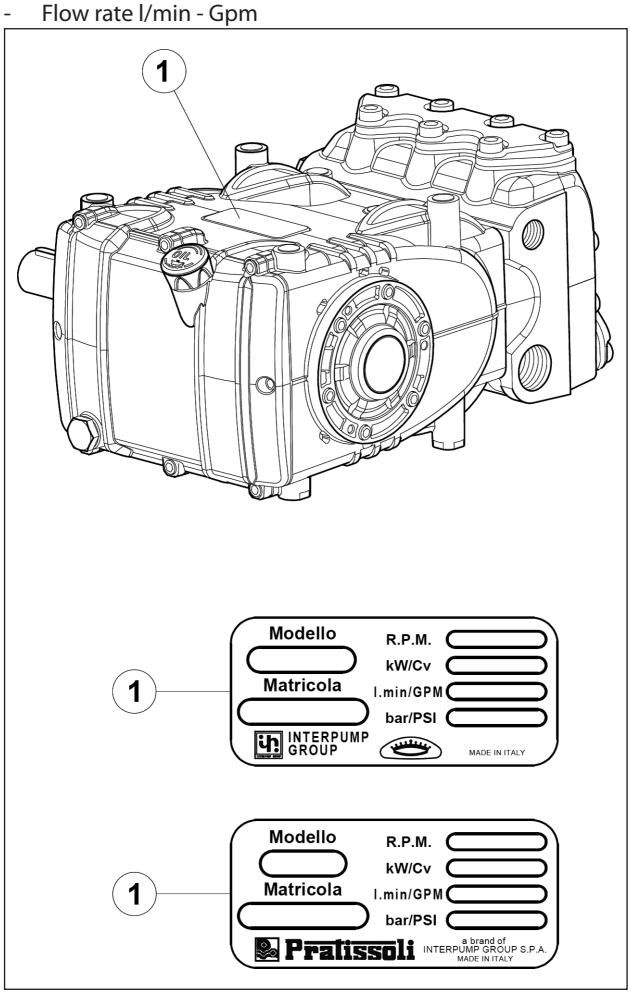


Fig. 1


Model, version and serial number must always be indicated when ordering spare parts.

5 TECHNICAL CHARACTERISTICS

Model	Rpm	Flow rate		Pressure		Power	
		l/min	Gpm	bar	psi	kW	HP
KE30BH W12070H	1450	70	18.5	120	1740	16.0	21.8
KE36BH W100100H	1450	100	26.4	100	1450	18.4	25
KE36B	1200	84	22.2	100	1450	16.0	21.8

6 DIMENSIONS AND WEIGHT

For Standard Version pump dimensions and weight, refer to Fig. 2.

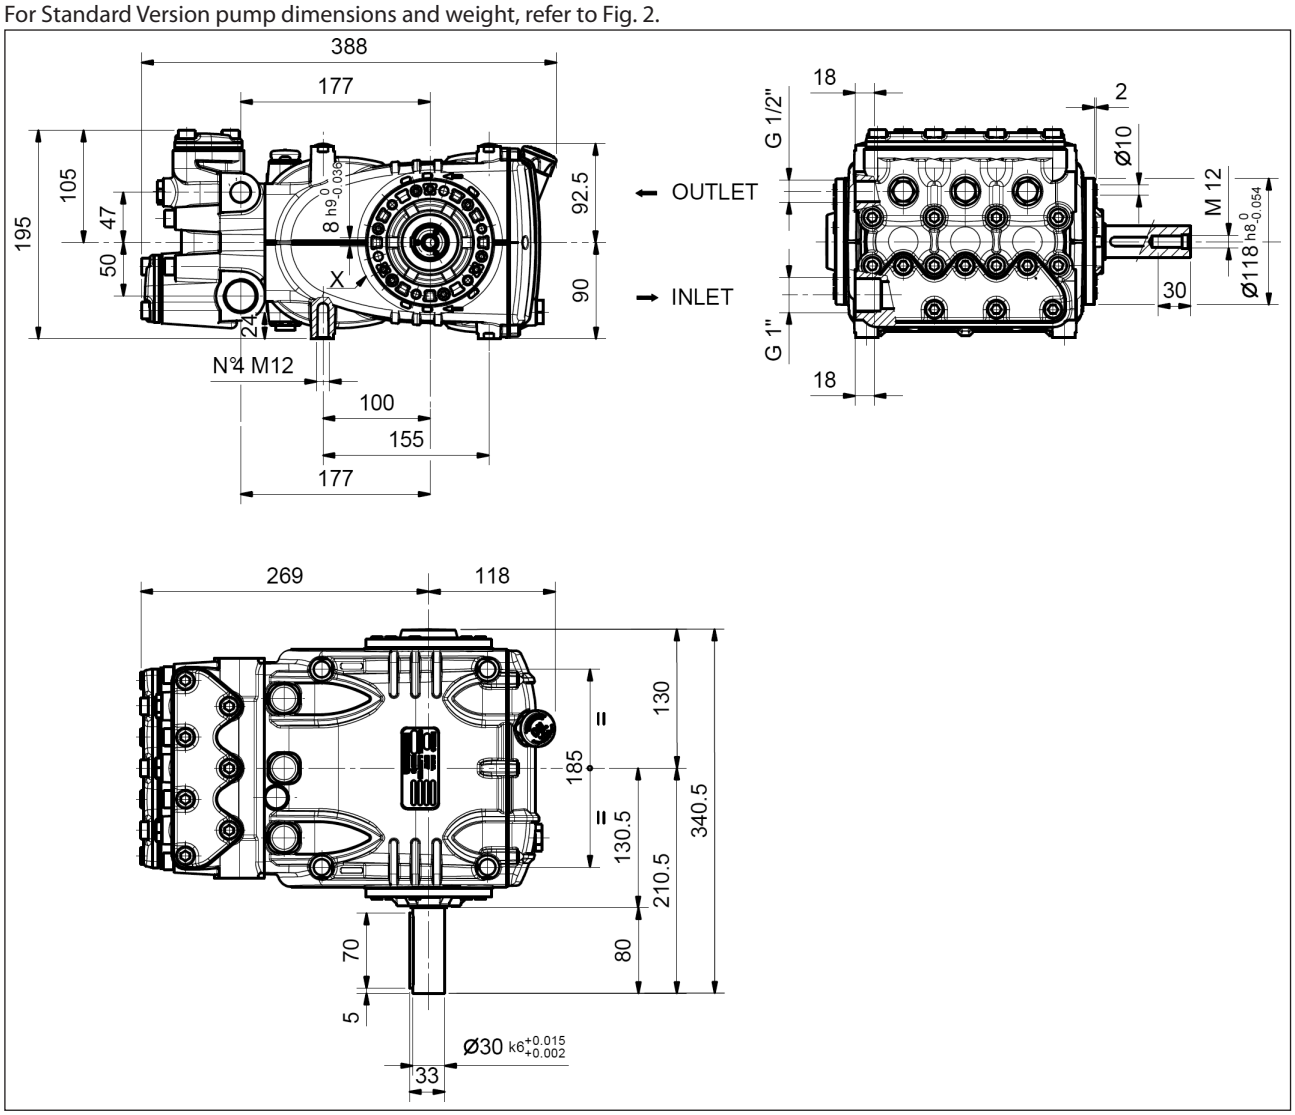

Dry weight 38 kg.

Fig. 2

7 OPERATING INSTRUCTIONS

The 70 SERIES - KEB pump has been designed to operate with filtered water (see par. 9.7) and at a maximum temperature of 40°C.
Other liquids can be used only upon approval by the ***Technical*** or ***Customer Service Departments***.

7.1 Water temperature

The maximum permissible water temperature is 40°C. However, the pump can be used with water up to a temperature of 60°C, but only for short periods. In this case, it is best to consult the ***Technical*** or ***Customer Service Departments***.

7.2 Maximum pressure and flow rate

The rated specifications stated in our catalogue are the max. that can be obtained by the pump. **Independently** of the power used, the maximum pressure and rpm indicated in the specification label can never be exceeded unless upon prior authorisation by our ***Technical*** or ***Customer Service Departments***.

7.3 Minimum rotating speed

Any rotating speed other than that indicated in the performance table (see chapter 5) must be expressly authorised by our ***Technical*** or ***Customer Service Departments***.

7.4 Brands and types of oils recommended

The pump is supplied with oil suitable for room temperatures from 0°C to 30°C.
Some types of recommended oil are indicated in the following table, these oils have additives to increase corrosion resistance and fatigue resistance (DIN 51517 part 2).
Alternatively you can also use Automotive Gear SAE 85W-90 oil for gearing lubrication.

Manufacturer	Lubricant
Agip	AGIP ACER220
ARAL	Aral Degol BG 220
BP	BP Energol HLP 220
Castrol	CASTROL HYSPIN VG 220 CASTROL MAGNA 220
DEA	Falcon CL220
elf	ELF POLYTELIS 220 REDUCTELF SP 220
Esso	NUTO 220 TERESSO 220
FINA	FINA CIRKAN 220
FUCHS	RENOLIN 212 RENOLIN DTA 220
Mobil	Mobil DTE Oil BB
Shell	Shell Tellus Öl C 220
SRS	Wintershall Ersolon 220 Wintershall Wiolan CN 220
TEXACO	RANDO HD 220
TOTAL	TOTAL Cortis 220

Check the oil level and top up if necessary
Using the oil dipstick pos. ①, Fig. 3.
The correct checking of the oil level is made with the pump not running, at room temperature. The oil change must be made with the pump at working temperature, removing: the oil dipstick, pos. ①, and then the plug pos. ②, Fig. 3.
The oil check and change must be carried out as indicated in the table in Fig. 14 chapter 11.
The quantity required is ~ 2 litres.


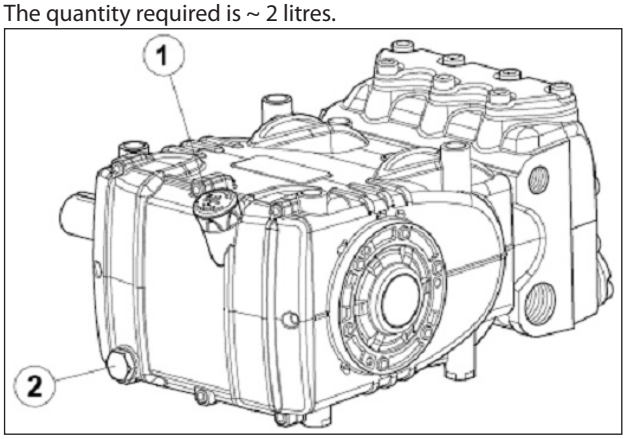


Fig. 3

In any case the oil must be changed at least once a year, as it is degraded by oxidation.

For a room temperature other than between 0°C - 30°C, follow the instructions in the following diagram, considering that oil must have a minimum viscosity of 180 cSt.

Viscosity / Room Temperature diagram
$mm^2/s = cSt$

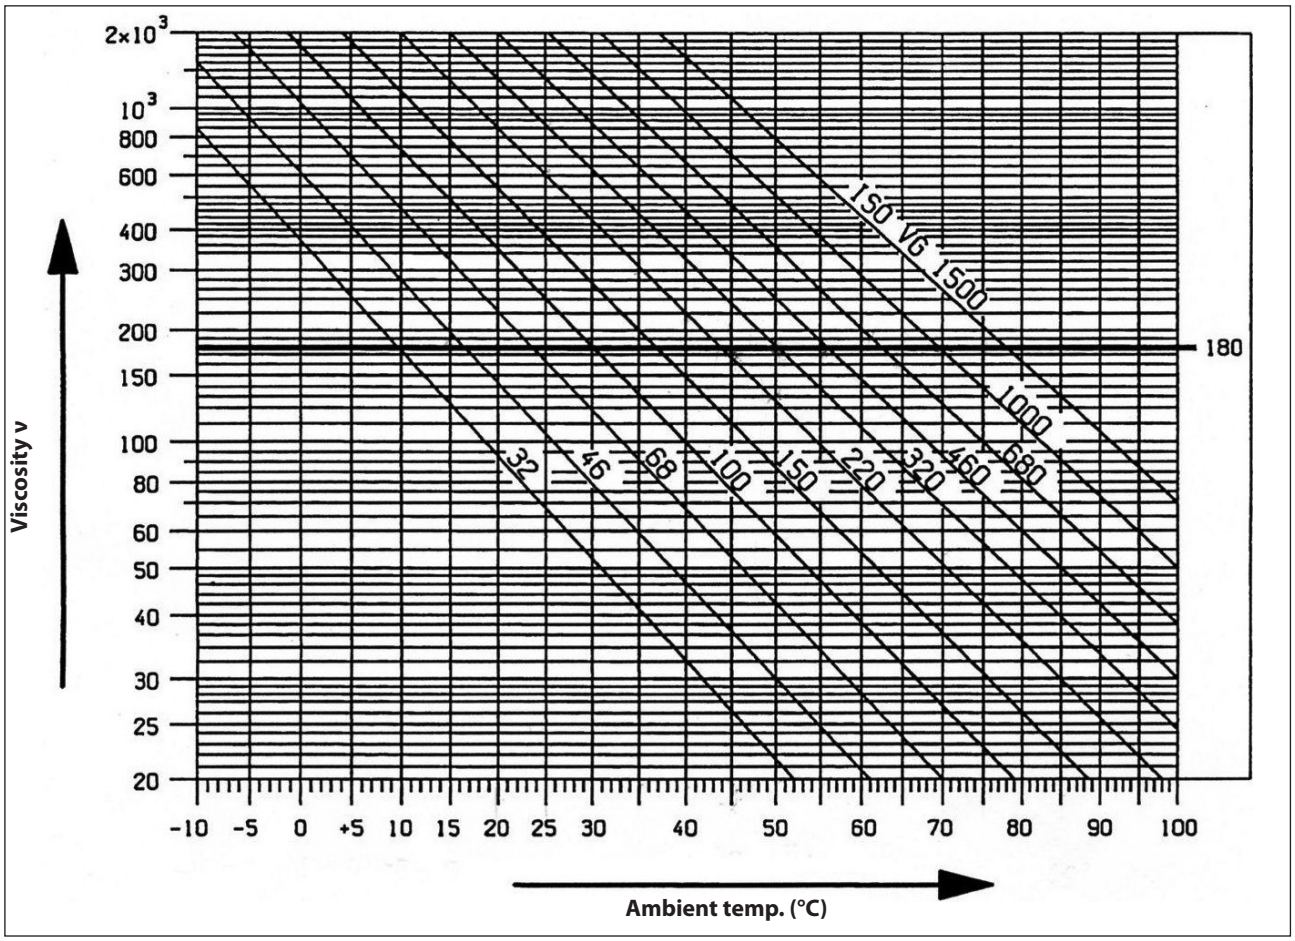

The used oil must be placed in a suitable container and disposed of in special centres. It absolutely should not be discarded into the environment.

8 PORTS AND CONNECTIONS

The 70 SERIES - KEB pumps (see Fig. 4) are equipped with:

① 2 "IN" inlet ports 1" Gas.
Line connection to any of the two ports is indifferent for proper pump functioning. The unused ports must be hermetically closed.

② 2 "OUT" outlet ports 1/2" Gas.

③ 3 service ports 1/4" Gas; usually used for the pressure gauge.

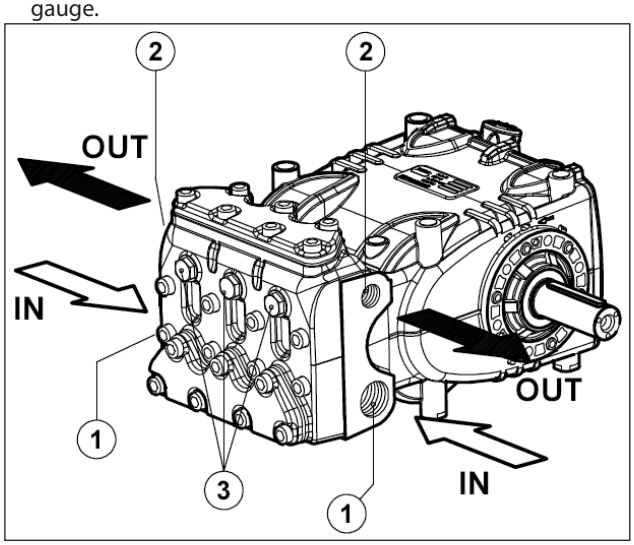


Fig. 4

9 PUMP INSTALLATION

9.1 Installation

The pump must be fixed horizontally using the M12 threaded support feet. Tighten the screws with a torque of 80 Nm.
The base must be perfectly flat and rigid enough as not to allow bending or misalignment on the pump coupling axis/ transmission due to torque transmitted during operation.
The unit cannot be fixed rigidly to the floor but must interposed with vibration dampers.
For special applications contact the ***Technical*** or ***Customer Service Departments***.

Replace the oil filling hole closing service plug (red) positioned on the rear casing cover. Check the correct quantity with the oil dipstick.
The oil dipstick must always be reachable, even when the unit is assembled.

The pump shaft (PTO) should not be rigidly connected to the propulsion unit.
The following types of transmission are recommended:

- Hydraulics by flange, for proper application consult with our ***Technical*** or ***Customer Service Departments***.
- V-belts.
- Cardan-shaft (comply with manufacturer's Max. recommended working angles).
- Flexible joint.

9.2 Rotation direction

The rotation direction is indicated by an arrow located on the casing near the drive shaft.
From a position facing the pump head, the rotation direction will be as in Fig. 5.

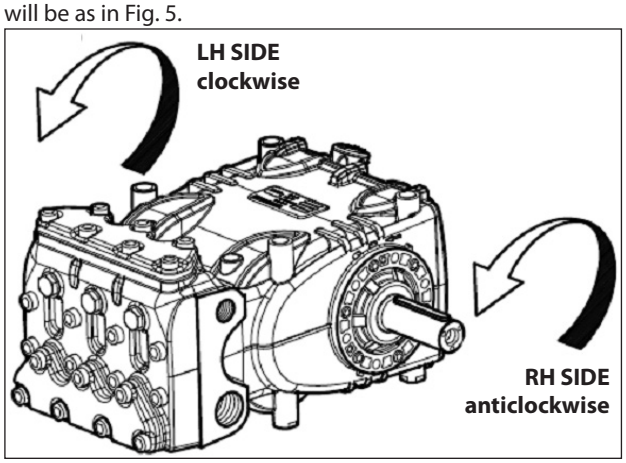


Fig. 5

9.3 Version change

The pump version is defined as right when:
Observing the pump facing the head side, the pump shaft must have a PTO shank on the right side.
The pump version is defined as left when:
Observing the pump facing the head side, the pump shaft must have a PTO shank on the left side.
Note. The version shown in Fig. 5 is right.

The version can only be modified by trained and authorised personnel and carefully following the instructions below:

1. Separate the hydraulic part from the mechanical part as indicated in chapter 2 par. 2.2.3 of the ***Repair manual***.
2. Turn the mechanical part 180° and reposition the rear casing cover in such a way that the oil dipstick is turned upward. Reposition the lifting bracket and relative hole closing plugs in the upper part of the casing. Finally, properly reposition the specification label in its housing on the casing.

Make sure that the lower casing draining holes in correspondence with the pistons are open and not closed from the plastic plugs provided for the previous version.

3. Unite the hydraulic part to the mechanical part as indicated in chapter 2 par. 2.2.5 of the ***Repair manual***.

9.4 Hydraulic connections

In order to isolate the system from vibrations produced by the pump, it is advisable to make the first section of the duct adjacent to the pump (both suction and outlet) with flexible piping. The consistency of the suction section must be such as to prevent deformations caused by vacuums produced by the pump.

9.5 Pump supply

A positive head of at least 0.20 metres is required for the best volumetric efficiency with the fluid at ambient temperature.

For negative prevalence contact our *Technical* or *Customer Service Departments*.

9.6 Suction line

For a smooth operation of the pump, the suction line should have the following characteristics:

1. Minimum internal diameter as indicated in the graph in par. 9.9 and in any case equal to or exceeding that of the pump head.

Localised restrictions should be avoided along the run of the duct, as these can cause load losses resulting in cavitation. Avoid 90° elbow bends, connections with other piping, constrictions, counterslopes, inverted U- curves and T-connections.

2. With a layout that is set in such a way to prevent cavitation.
3. Completely airtight and constructed to ensure sealing over time.
4. Prevent that pump stopping causes emptying, even partial.
5. Do not use 3 or 4-way hydraulic fittings, adapters, swivel joints, etc. as they could jeopardise pump performance.
6. Do not install Venturi tubes or injectors for detergent suction.
7. Avoid use of base valves or other types of unidirectional valves.
8. Do not recirculate by-pass valve discharge directly into suction.
9. Provide for proper guards inside the tank to prevent that water flow from the bypass and the tank supply line can create vortexes or turbulence near the pump supply pipe port.
10. Make sure the suction line is thoroughly clean inside before connecting it to the pump.

9.7 Filtration

1 filter must be installed on the pump suction line, positioned as indicated in Fig. 6 and Fig. 6/a.

With a manually activated control valve

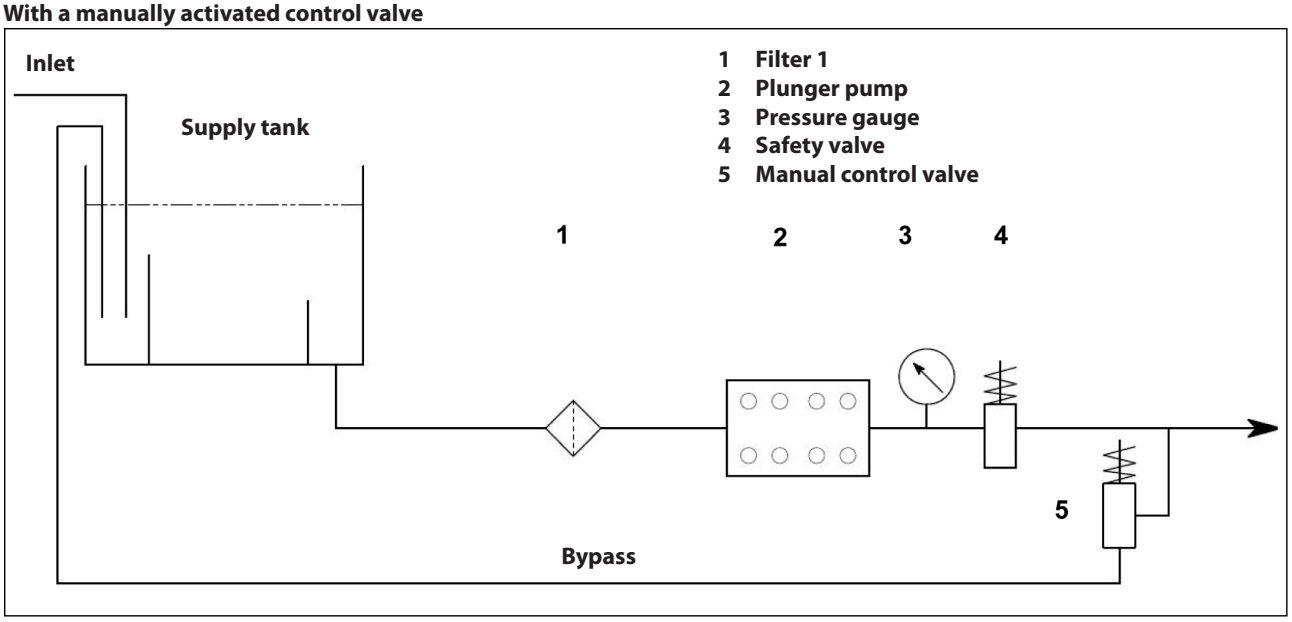


Fig. 6

With a pneumatically activated control valve

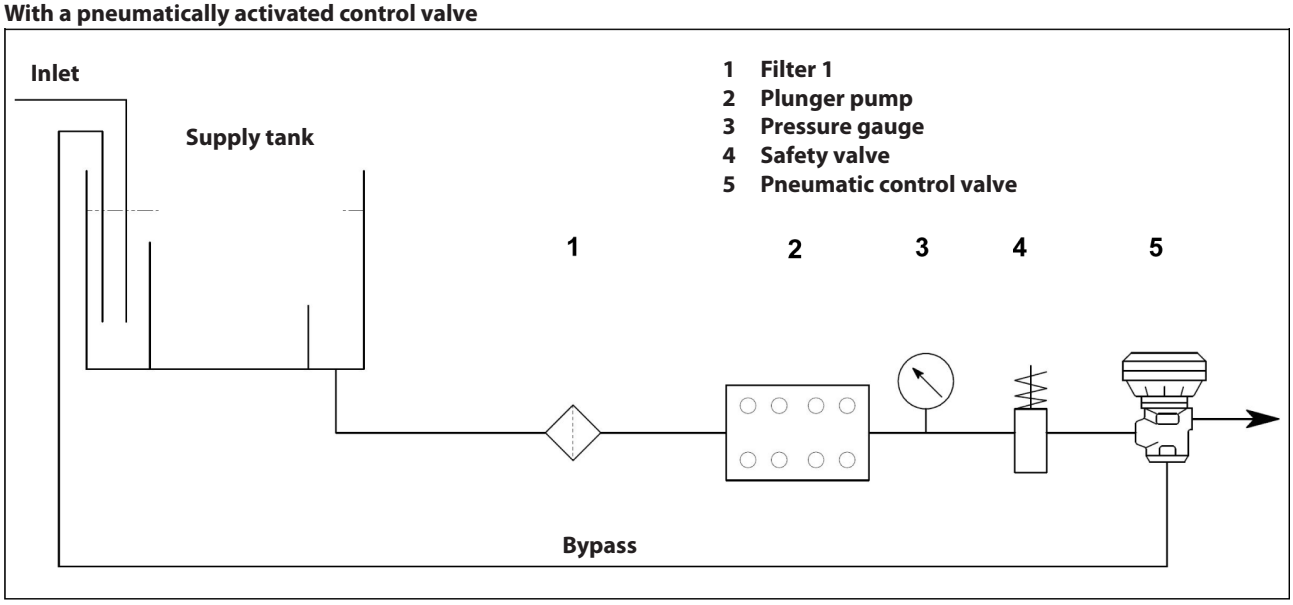


Fig. 6/a

The filter must be installed as close as possible to the pump, it must be easily inspected and must have the following characteristics:

1. Minimum flow rate at least 3 times the nominal flow rate of the pump.
2. Inlet/outlet port diameters no smaller than the inlet port diameter of the pump.
3. Filtration grade between 200 and 360 µm.

For smooth pump operation, regular filter cleaning is necessary, planned according to the actual use of the pump in relation to the quality of water used and actual clogging conditions.

9.8 Outlet line

For the correct laying of the outlet line, the following installation rules must be followed:

1. The internal diameter of the pipe must be sufficient to ensure correct fluid velocity, see graph in par. 9.9.
2. The first section of the line connected to the pump outlet must be a flexible hose, in order to isolate the vibrations produced by the pump of the rest of the system.
3. Use high pressure pipes and fittings to ensure high safety margins in all operating conditions.
4. The outlet line must always be provided with a Max. pressure valve.
5. Use pressure gauges suitable to withstand pulsating loads typical of the plunger pumps.
6. During the design stage, keep in mind the line load losses which result in a drop in pressure during use with respect to the pressure measured on the pump.
7. For those applications where pulses produced by the pump on the outlet line may prove harmful or unwanted, install a pulsation dampener of sufficient size.

9.9 Calculation of the internal diameter of the duct pipes

To determine the internal diameter of the duct, refer to the following diagram:

Suction duct


With a flow rate of ~ 70 l/min and a water velocity of 0.5 m/sec. The graph line joining the two scales meets the central scale showing the diameters, corresponding to a value of ~ 55 mm.

Outlet duct

With a flow rate of ~ 70 l/min and a water velocity of 5.0 m/sec. The graph line joining the two scales meets the central scale showing the diameters, corresponding to a value of ~ 18 mm.

Optimal speeds:

- Suction: ≤ 0.5 m/sec.
- Outlet: ≤ 5 m/sec.

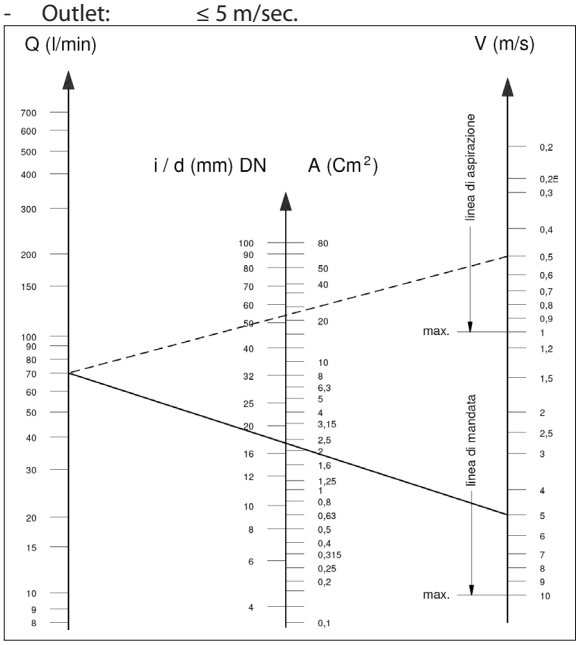

The graph does not take into account pipe resistance, valves, load loss produced by the length of the ducts, the viscosity of the liquid pumped or the temperature itself.
If necessary, contact our ***Technical*** or ***Customer Service Departments***.

9.10 V-belt transmission

For this pump model, we recommend use of 2 XPB belts (16.5x13 serrated). Use an XPC profile only for long durations. Both the characteristics and transmissible power of each belt can be verified in the diagram in Fig. 7, in relation to the number of rpm normally declared by the manufacturer. Minimum duct pulley diameter (on pump shaft): ≥ 160 mm.

The radial load on the shaft must not exceed 3000 N (value necessary for Layout definition). The transmission is considered adequate if the load is applied to a maximum distance **a=30 mm** from the shaft shoulder (P.T.O) as shown in Fig. 10.

For dimensions differing from those specified above, contact our ***Technical*** or ***Customer Service Departments***.

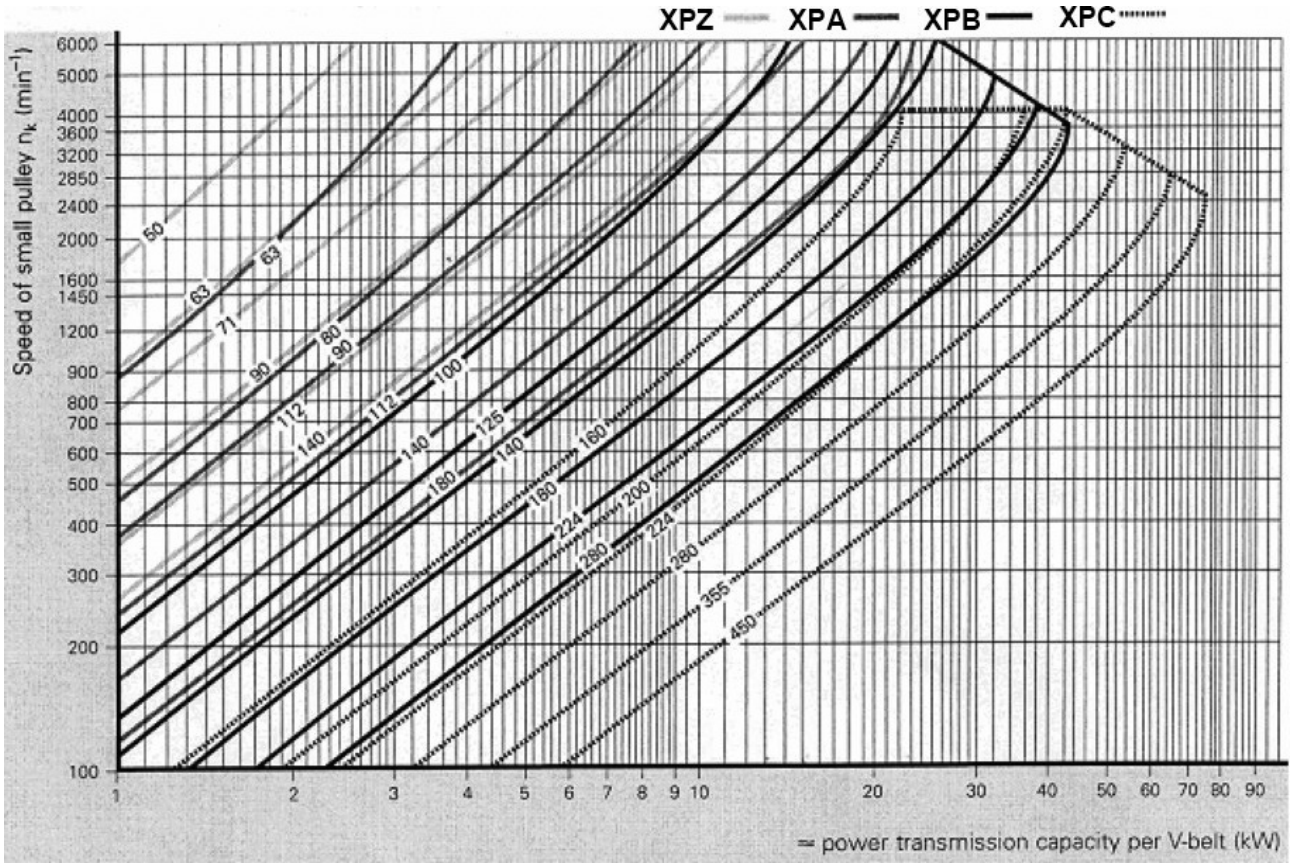


Fig. 7

9.11 Transmission definition

To prevent irregular radial loads on the shaft and the relative bearing, follow these directions:

a) Use pulleys with V-belts with the size of the groove required/recommended by the manufacturer of belt used. In the absence of directions, follow Fig. 8 and the table in Fig. 9.

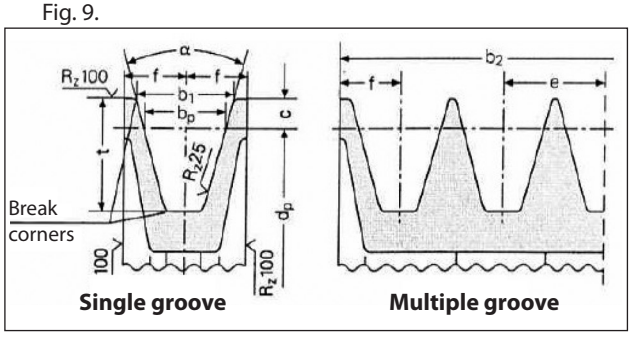


Fig. 8

Dimensions (in mm)

Belt section as per DIN 7753 part 1 and B.S. 3790		DIN symbol symbol B.S./ISO		XPB/SPB SPB	XPC/SPC SPC
Belt section as per DIN 2215 and B.S. 3790		DIN symbol symbol B.S./ISO		17 B	22 C
Pitch width			b_w	14.0	19.0
Increased grooving width $b_1 \approx$		α = 34°		18.9	26.3
		α = 38°		19.5	27.3
			c	8.0	12.0
Distance between grooving			e	23 ± 0.4	31 ± 0.5
			f	14.5 ± 0.8	20.0 ± 1.0
Increased grooving depth			t_{min}	22.5	31.5
α	34°	by primitive diameter	d_w	from 140 to 190	from 224 to 315
	38°	narrow-section V-belts DIN 7753 part 1		> 190	> 315
α	34°	by primitive diameter	d_w	from 112 to 190	from 180 to 315
	38°	classic section V-belts DIN 2215		> 190	> 315
Tolerance for α = 34°-38°				± 1°	± 30′
Pulleys for b2 by grooving number z b2 = (z-1) e + 2 f			1	29	40
			2	52	71
			3	75	102
			4	98	133
			5	121	164
			6	144	195
			7	167	226
			8	190	257
			9	213	288
			10	236	319
			11	259	350
			12	282	381
Minimum pulley diameter must be respected. Do not use laminated V-belts.					Fig. 9

b) Use high performance belts – for example **XPB** instead of **SPB** – as a lower quantity of belts for the same transmitted power may be necessary and a consequent shorter resulting distance compared to the shaft shoulder (P.T.O) "a" of Fig. 10.

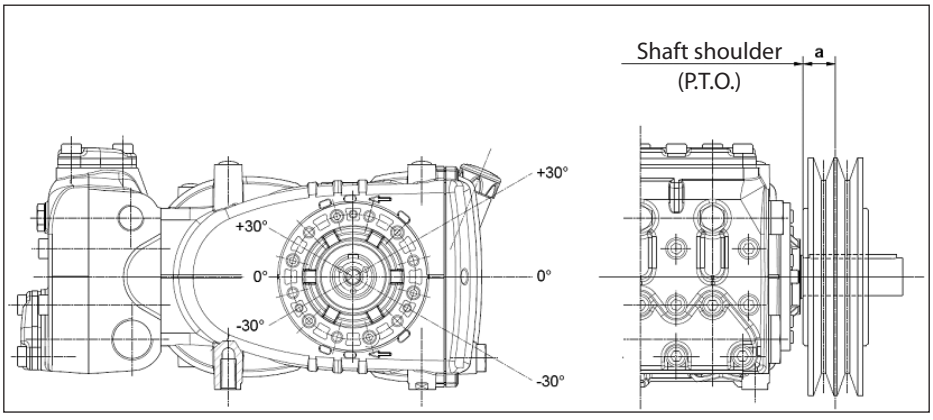


Fig. 10

c) Pull the belts according to manufacturer instructions. Excessive pulling can cause reduced bearing life and wear out the pulley prematurely. Pulling depends on different variables as indicated in par. 9.12.

d) Belt length has a natural tolerance ≥ ± 0.75%. For this reason, the 2 belts must be purchased as a pair.

e) Follow the direction of the belt pull as shown in Fig. 9 for other needs, contact our ***Technical*** or ***Customer Service Departments***.

f) Take care of the alignment of the driving pulley and driven pulley grooves.

9.12 Definition of static pull to apply on belts

Static pull depends on:

a) The wheelbase between the two pulleys (belt length).
b) The load due to static pull of the belt.
c) The number of belts.
d) The winding angle of the smallest pulley.
e) Average speed.

The diagram in Fig. 11 for belts with an XPB profile in relation to the wheelbase indicates the correct tensioning Tc (belt sag with a dynamometer load of 71 N).


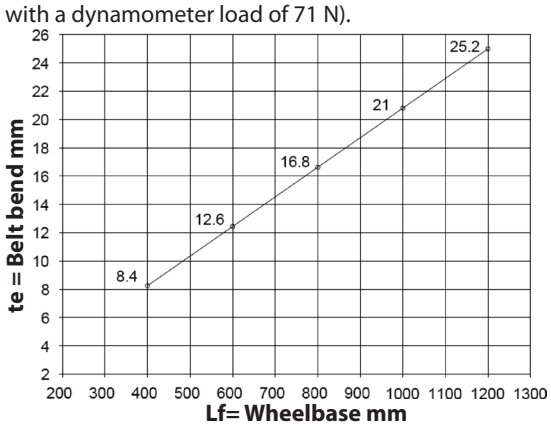


Fig. 11

Conclusion: with a wheelbase of 400 mm and with a dynamometer, loading the belt branch with 75 N as indicated in Fig. 12, a "te" bend of approximately 8.4 mm is obtained.

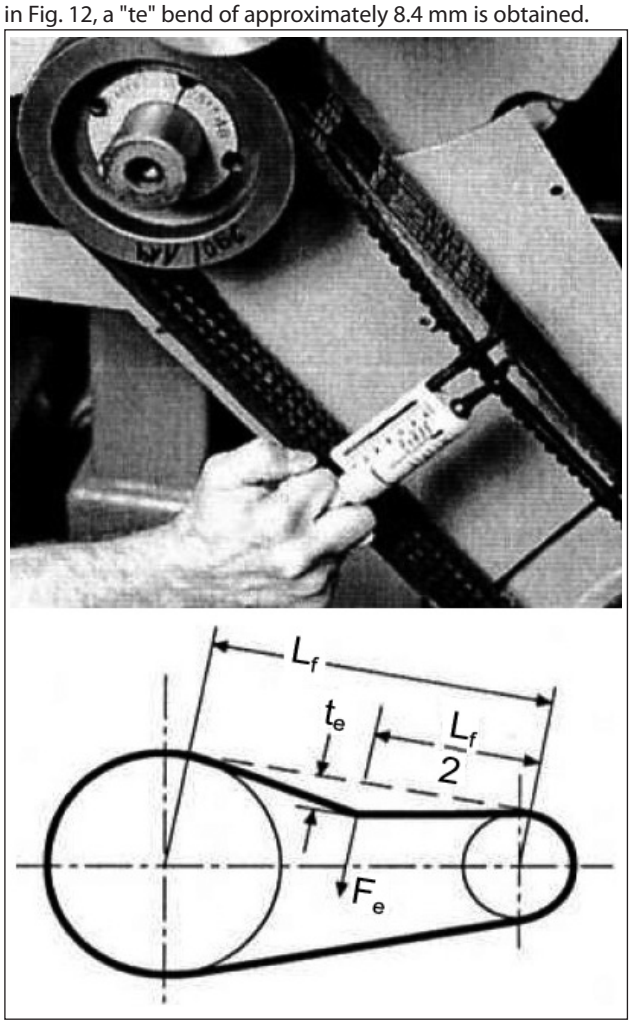

Lf = Wheelbase
te = Belt bend
Fe = 75 N Dynamometer load

Fig. 12

Note$_1$. Unless otherwise stated by the supplier of the belts, control of proper pull and its relative re-tensioning should be performed after no less than 30 minutes of motion necessary for the normal adjustment of the belts. Best performance and durability will be achieved with proper tensioning.

Note$_2$. In case of necessity or for routine maintenance, never replace a single belt but the complete set.

9.13 Transmission of power from the second PTO

Upon request, 70 SERIES - KEB pumps can be supplied with an auxiliary PTO on the opposite side to the drive (Transmission of power from the second PTO).

Transmission can be carried out:

- By means of the V-belts.
- By means of the joint.

By means of the V-Belts, withdrawable Max Torque is:
20 Nm which corresponds to:
2.3 HP at 800 rpm;
4.1 HP at 1450 rpm.

By means of the joint, withdrawable Max Torque is:
40 Nm which corresponds to:
4.6 HP at 800 rpm;
8.2 HP at 1450 rpm.

By means of the V-belt, the transmission is considered suitable if: belt pull is applied at a max distance of 18 mm with from the bend shaft shoulder (see Fig. 13). Min diameter of pulley to be used = Ø 100 mm.

With transmission by means of the joint, pay particular attention to perfect alignment so that no transverse forces are generated on the pump shaft.

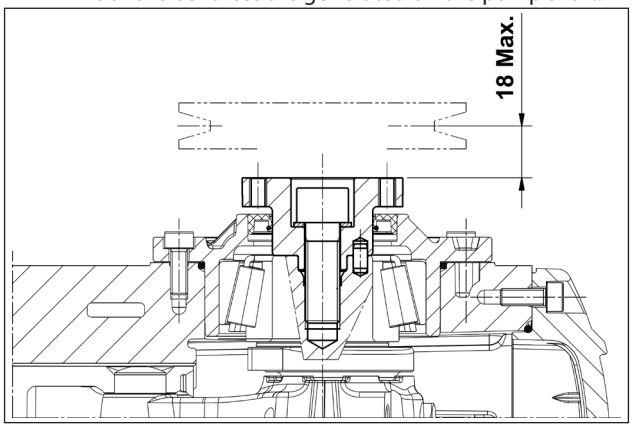


Fig. 13

For applications differing from those specified above, contact our ***Technical*** or ***Customer Service Departments***.

10 START-UP AND OPERATION

10.1 Preliminary checks

Before start-up, ensure that:

The suction line is connected and pressurised (see par. 9.4 - 9.5 - 9.6) the pump must never run dry.

1. The suction line ensures a hermetic seal over time.
2. Any shut-off valves between the supply source and the pump are fully open. The outlet line during is free discharge, to permit air present in the pump head to come out quickly and therefore favour fast priming.
3. All suction and outlet fittings and connections are properly tightened.
4. The coupling tolerances on the pump/transmission axis (half-joint misalignment, Cardan joint tilt, belt pulling, etc.) remain within limits required by the transmission manufacturer.
5. Oil in the pump casing is at level, verified with a dipstick (pos. ①, Fig. 14) and exceptionally with a level indicator (pos. ②, Fig. 14).

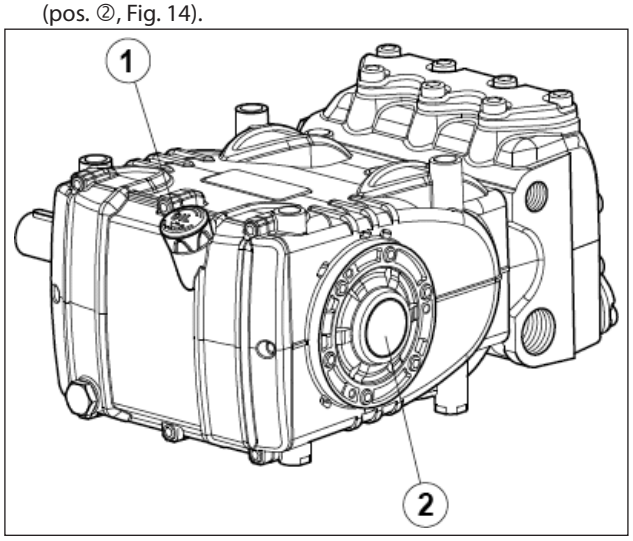


Fig. 14

In case of prolonged storage or long-term inactivity, check proper functioning of the suction and outlet valves.

10.2 Start-up

1. At first start-up, verify that the rotation direction and the supply pressure are correct.
2. Start-up the pump without any load.
3. Check that the supply pressure is correct.
4. Check that the rotation rpm during operation does not exceed the nominal rpm of the pump.
5. Let the pump run for a period of no less than 3 minutes, before putting it under pressure.
6. Before each pump stop, reset pressure by means of the control valve or with any relieving devices and reduce to a minimum rpm (activation with combustion motors).

11 PREVENTIVE MAINTENANCE

For pump reliability and efficiency, comply with maintenance intervals as shown in the table of Fig. 15.

PREVENTIVE MAINTENANCE	
Every 500 hours	**Every 1000 hours**
Check oil level	Change oil
	Check / Replace*: Valves Valve seats Valve springs Valve guides
	Check / Replace*: H.P. seals L.P. seals

Fig. 15

* To replace, follow instructions contained in the ***Repair manual***.

12 PUMP STORAGE

12.1 Long-term inactivity

If the pump is started for the first time after a long period from the date of shipment, before operation check the oil level, inspect the valves as specified in chapter 10, then follow described start-up procedures.

12.2 Method for filling pump with anti-corrosion emulsion or anti-freeze solution

Method for filling pump with anti-corrosion emulsion or anti-freeze solution using an external diaphragm pump based on the layout shown in par. 9.7, between pos. ① and pos. ② of Fig. 6 and Fig. 6/a:

- In place of the service tank, use a suitable container containing the solution to be pumped.
- Close the filter drainage, if open.
- Make sure that the hoses to be used are clean inside and spread grease on their connections.
- Connect the high pressure exhaust pipe to the pump.
- Connect the suction pipe to the diaphragm pump.
- Connect the suction pipe between the pump head and the diaphragm pump.
- Fill the service container with solution/emulsion.
- Insert the free ends of the suction pipes and the high pressure exhaust pipe inside the container.
- Switch on the diaphragm pump.
- Pump the emulsion until it exits from the high pressure exhaust pipe.
- Continue pumping for at least another minute.
- Stop the pump and remove the previously connected pipes.
- Clean, grease and plug the connections on the pump head.

The characteristics of the emulsion can be strengthened if necessary by adding, for example, Shell Donax.

13 PRECAUTIONS AGAINST FROST

Follow the instructions in Chapter 12 in areas and times of the year at risk of frost (see par. 12.2).

In the presence of ice, do not run the pump for any reason until the circuit has been fully defrosted, in order to avoid serious damage to the pump.

14 GUARANTEE CONDITIONS

The guarantee period and conditions are contained in the purchase agreement.
The guarantee will in any case be invalidated if:

a) The pump is used for purposes other than for those agreed upon.
b) The pump is fitted with an electric or combustion motor with performance exceeding those indicated in the table.
c) Safety devices are decalibrated or disconnected.
d) The pump is used with accessories or parts not supplied by Interpump Group.
e) Damage has been caused by:
   1) improper use
   2) failure to follow maintenance instructions
   3) any use different from that described in the operating instructions
   4) lack of sufficient flow rate
   5) defective installation
   6) improper positioning or sizing of pipes
   7) unauthorised design modifications
   8) cavitation.

15 OPERATING FAULTS AND THEIR POSSIBLE CAUSES



The pump does not produce any noise upon start-up:
- The pump is not primed and is running dry.
- No suction water.
- Valves are blocked.
- The outlet line is closed and does not allow air present in the pump head to come out.



The pump pulsates irregularly:
- Air suction.
- Insufficient supply.
- Bends, elbow bends, fittings along the suction line are choking the passage of liquid.
- The suction filter is dirty or too small.
- The booster pump, where installed, is supplying insufficient pressure or flow rate.
- The pump is not primed for insufficient head or the outlet is closed during priming.
- The pump is not primed due to valve jamming.
- Worn valves.
- Worn pressure seals.
- Imperfect functioning of the pressure control valve.
- Problems on the transmission



The pump does not supply the nominal flow rate/ excessive noise:



- Insufficient supply (see various causes as above).
- The number of rpms is less than the nominal rate;
- Excessive leakage of the pressure control valve.
- Worn valves.
- Excessive leakage of the pressure seals.
- Cavitation due to:
   1) Improper sizing of suction ducts/undersized diameters.
   2) Insufficient flow rate.
   3) High water temperature.



The pressure supplied by the pump is insufficient:
- Use (nozzle) is or has become higher than the capacity of the pump.
- The number of rpms is insufficient.
- Excessive leakage of the pressure seals.
- Imperfect functioning of the pressure control valve.
- Worn valves.




The pump is overheated:
- The pump is working in pressure excess or the number of rpms is higher than the nominal rate.
- Oil in the pump casing is not at level or not the recommended type as detailed in chapter 7 (see par. 7.4).
- Excess belt tension or joint or pulley alignment is incorrect.
- Excessive pump tilt during operation.



Vibrations and shock to pipes:
- Air suction.
- Imperfect functioning of the pressure control valve.
- Valve malfunction.
- Non-uniformity in the transmission motion.


Flangia tipo "A" per azionamenti diretti

OPTIONAL

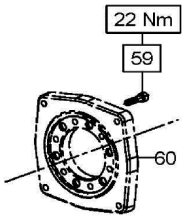


Campana e Giunto per accoppiamenti a motori idraulici SAE B


OPTIONAL

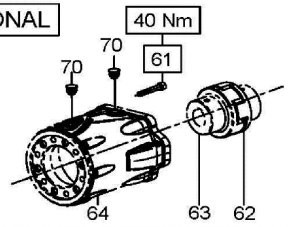

Presa di forza ausiliare su lato opposto azionamento

OPTIONAL

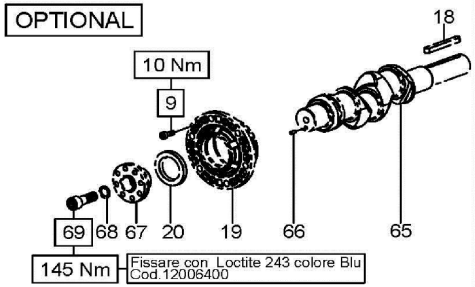

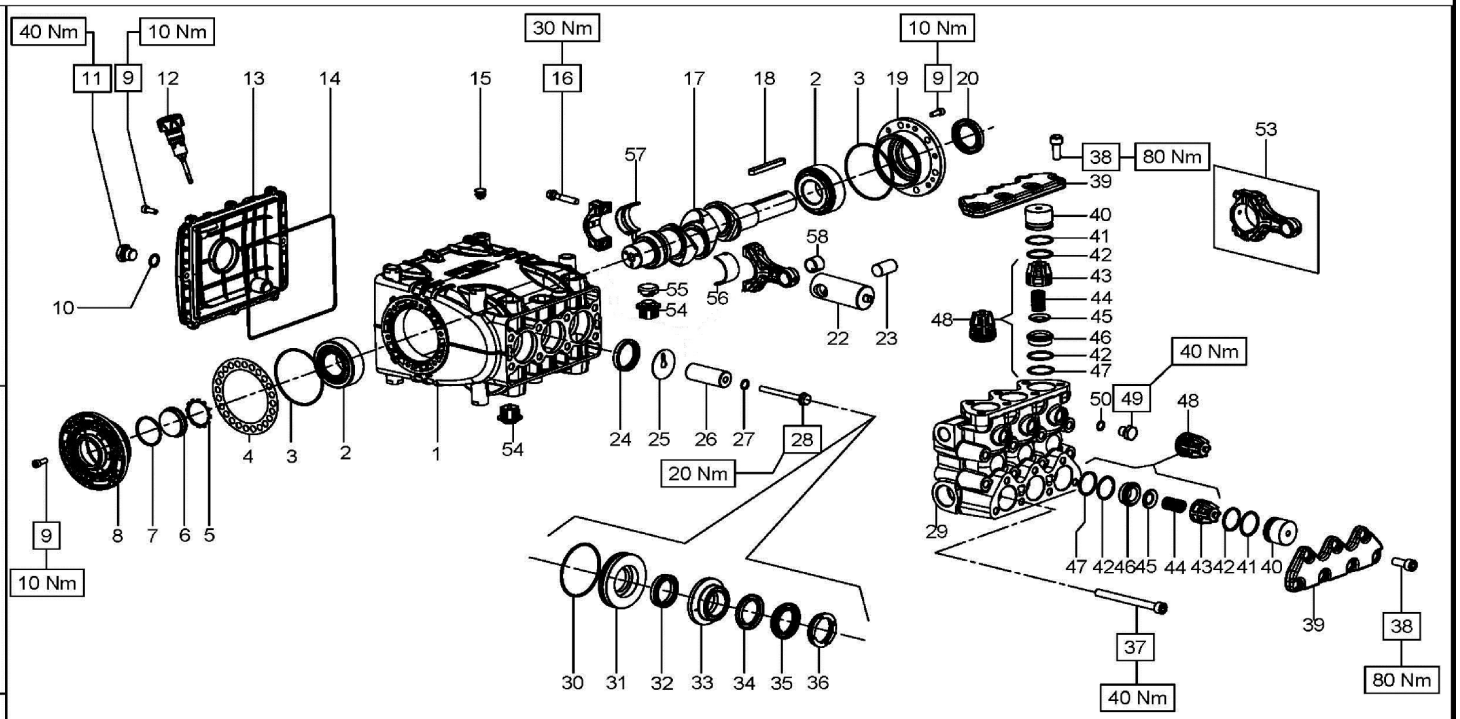

Lubrificare con grasso al silicone
OCILIS 250 cod.12001600 i particolari pos.32-pos.34-pos.35

KEB

DIS. COD. 70.9511.00

KIT RICAMBIO – SPARE KIT		W12070H KE30BH	KE36B	W100100H KE36BH
A	Kit tenute pompanti – Plunger packing kit	KIT 2010	KIT 2133	KIT 2133
B	Kit valvole aspirazione/mandata – In/Out valves kit	KIT 2030		
D	Kit tenute complete – Complete seals kit	KIT 2011	KIT 2134	KIT 2134
E	Kit bronzine bielle – Conrod bushing kit	KIT 2156 (STD) - 2157 (+0,25) - 2158 (+0,50)		

INTERPUMP GROUP

W12070H
W100100H

Pratissoli

KE30BH
KE36B
KE36BH


POS	CODE CODICE	DESCRIPTION DESCRIZIONE	KIT	NR. PCS.
1	70.0100.22	CARTER POMPA		1
2	91.8477.00	CUSCINETTO RULLI CON. 33207		2
3	90.3915.00	OR D. 80.60x2.62 NBR SH. 70 3318	D	2
4	70.2200.81	SPESSORE DI RASAMENTO 0.1 MM		-
	70.2203.81	SPESSORE DI RASAMENTO 0.25 MM		
5	90.0756.00	ANELLO SEEGER D. 45	D	1
6	70.2118.01	SPIA LIVELLO OLIO	D	1
7	90.3877.00	OR D. 39.34x2.62 NBR SH. 70 3156	D	1
8	70.1501.22	COPERCHIO CUSCINETTO LATO SPIA		1
9	99.1854.00	VITE M6X16 UNI 5931 8.8 ZINC.		20
10	90.3833.00	OR D. 13.95x2.62 NBR SH. 70 3056	D	1
11	98.2100.50	TAPPO G 3/8"x13 TE22 ZINC.		1
12	98.2115.00	TAPPO CON ASTA D. 21.5x70		1
13	70.1600.22	COPERCHIO CARTER		1
14	90.3942.00	OR D. 190.17x2.62 FPM SH. 70 3068	D	1
15	98.2005.00	TAPPO PER FORO D. 15		5
16	99.3123.00	VITE SERRAGGIO BIELLA M8x1x42		6
17	70.0200.35	ALBERO A GOMITI C.23		1
18	91.4900.00	LINGUETTA 8x7x70 UNI 6604		1
19	70.1500.22	COPERCHIO CUSCINETTO LATO PTO		1
20	90.1668.00	ANELLO RAD. D. 35x52x7 VITON	D	1
22	70.0500.15	GUIDA PISTONE		3
23	97.7420.00	SPINOTTO D. 18x36		3
24	90.1677.00	ANELLO RAD. D. 36x47x6/7.5	D	3
25	96.7099.00	ROSETTA D. 10x45x1		3
26	70.0404.09	PISTONE D. 30x62		3
	70.0405.09	PISTONE D. 36x62		
27	90.3584.00	OR D. 10.82x1.78 NBR SH. 90 2043	D	3
28	70.2241.36	VITE FISSAGGIO PISTONE		3
29	70.1244.41	TESTATA PER PISTONE D. 30		1
	70.1239.41	TESTATA PER PISTONE D. 36 - KE36B		
	70.1241.41	TESTATA PER PIST. D. 36 NICKEL - KE36BH		

POS	CODE CODICE	DESCRIPTION DESCRIZIONE	KIT	NR. PCS.
30	90.3626.00	OR D. 50.52x1.78 NBR SH. 70 2200	A-D	
31	70.0804.70	ANELLO DI FONDO D.30 - KEB		3
	70.0812.70	ANELLO DI FONDO D.36 - KEB		
32	90.2760.00	ANELLO TEN. ALT. D. 30x38x5,5 LP	A-D	3
	90.2800.00	ANELLO TEN. ALT. D. 36x44x6 LP	A-D	
33	70.2164.70	ANELLO INTERMEDIO D. 30		3
	70.2224.70	ANELLO INTERMEDIO D. 36		
34	90.2774.00	ANELLO "RESTOP" 30x45x8/4,5	A-D	3
	90.2818.00	ANELLO "RESTOP" 36x48x6/3	A-D	
35	90.2770.00	ANELLO TEN. ALT. 30x45x7/4,5 HP	A-D	3
	90.2820.00	ANELLO TEN. ALT. 36x48x6/3,5 HP	A-D	
36	70.1004.51	ANELLO DI TESTA PISTONE D. 30		3
	71.1002.51	ANELLO DI TESTA PISTONE D. 36		
37	99.3816.00	VITE M10X110 UNI 5931 8.8 ZINC.		8
38	99.3671.00	VITE M10X25 UNI 5931 12.9 G321A+M		14
39	70.2219.41	COPERCHIO VALVOLE - KE30BH - KE36B		1
	70.2223.41	COPERCHIO VALVOLE - NICKEL - KE36BH		
40	70.2116.70	TAPPO VALVOLE ASP./ MANDATA		6
41	90.5180.00	ANELLO ANTIEST. D. 32.4x36.5x1.5	D	6
42	90.3865.00	OR D. 29.82x2.62 NBR SH. 70 3118	D	12
43	36.2047.05	GUIDA VALVOLA ASP./ MANDATA		6
44	94.7450.00	MOLLA Dm. 16X27,5 INOX		6
45	36.2010.76	VALVOLA SFERICA		6
46	36.2048.66	SEDE VALVOLA ASP./ MANDATA		6
47	90.5178.00	ANELLO ANTIEST. D. 31x35.5x1.5	D	6
48	36.7143.01	GRUPPO VALVOLA ASP./ MANDATA	B	6
49	98.2100.00	TAPPO G 3/8"x13 - KE36B		3
	98.2099.00	TAPPO G 3/8"x13 NICKEL - KE36BH		
	98.2043.00	TAPPO G 1/4"x13 - KE30BH		
50	90.3585.00	OR D. 10.82x1,78 NBR SH. 70 2043 - KE30BH	D	3
	90.3833.00	OR D. 13,95x2,62 NBR SH. 70 3056 - KE36B - KE36BH	D	
53	70.0305.01	BIELLA COMPLETA		3

POS	CODE CODICE	DESCRIPTION DESCRIZIONE	KIT	NR. PCS.
54	70.2225.51	TAPPO CARTER		6
55	71.2259.51	CAPPUCCIO TAPPO CARTER		3
56	90.9220.00	SEMIBOCC. TESTA BIELLA - SUP.	E	3
	90.9221.00	SEMIBOCC. TESTA BIELLA S.+0.25	E	
	90.9222.00	SEMIBOCC. TESTA BIELLA S.+0.50	E	
57	90.9223.00	SEMIBOCC. TESTA BIELLA - INF.	E	3
	90.9224.00	SEMIBOCC. TESTA BIELLA I.+0.25	E	
	90.9225.00	SEMIBOCC. TESTA BIELLA I.+0.50	E	
58	90.9100.00	BOCCOLA PIEDE BIELLA		3
CON FLANGIA "A" – WITH DIRECT DRIVE FLANGE				
59	99.3084.00	VITE M8X30 UNI 5931 8.8 ZINC.		6
60	10.0673.20	FLANGIA MOT. IDRAULICO TIPO A		1
MOTORE IDR. SAE-B – SAE-B HYDR. MOTOR DRIVE				
70	98.2060.00	TAPPO PER FORO D. 15		2
61	99.3136.00	VITE M8X45 UNI 5931 12.9 G321		6
62	10.0755.47	ELEMENTO ELASTICO GIUNTO Di. 46		1
63	10.7430.01	GIUNTO ELASTICO D. 30x25.4		1
64	10.0752.20	FLANGIA MOT. IDR. SAE-B		1
PDF AUSILIARIA – AUXILIARY PTO				
9	99.1854.00	VITE M6X16 UNI 5931 8.8 ZINC.		6
18	91.4900.00	LINGUETTA 8x7x70 UNI 6604		1
19	70.1500.22	COPERCHIO CUSCINETTO LATO PTO		1
20	90.1668.00	ANELLO RAD. D. 35x52x7 VITON		1
65	70.0205.35	ALBERO A GOMITI C.23 D.PTO		1
66	97.6152.00	SPINA D .5x10		1
67	70.2234.54	DISPOSITIVO DOPPIA PTO S.70		1
68	96.7160.00	ROSETTA D. 12X18X1 DIN988		1
69	99.4295.00	VITE M12X35 UNI 5931 12.9 G321		1

17 FLUSHING CIRCUIT DIAGRAM OF USE

Adhere to the following values for proper system operation:
minimum circuit flow rate 4 l/min, maximum fluid pressure 6 bar

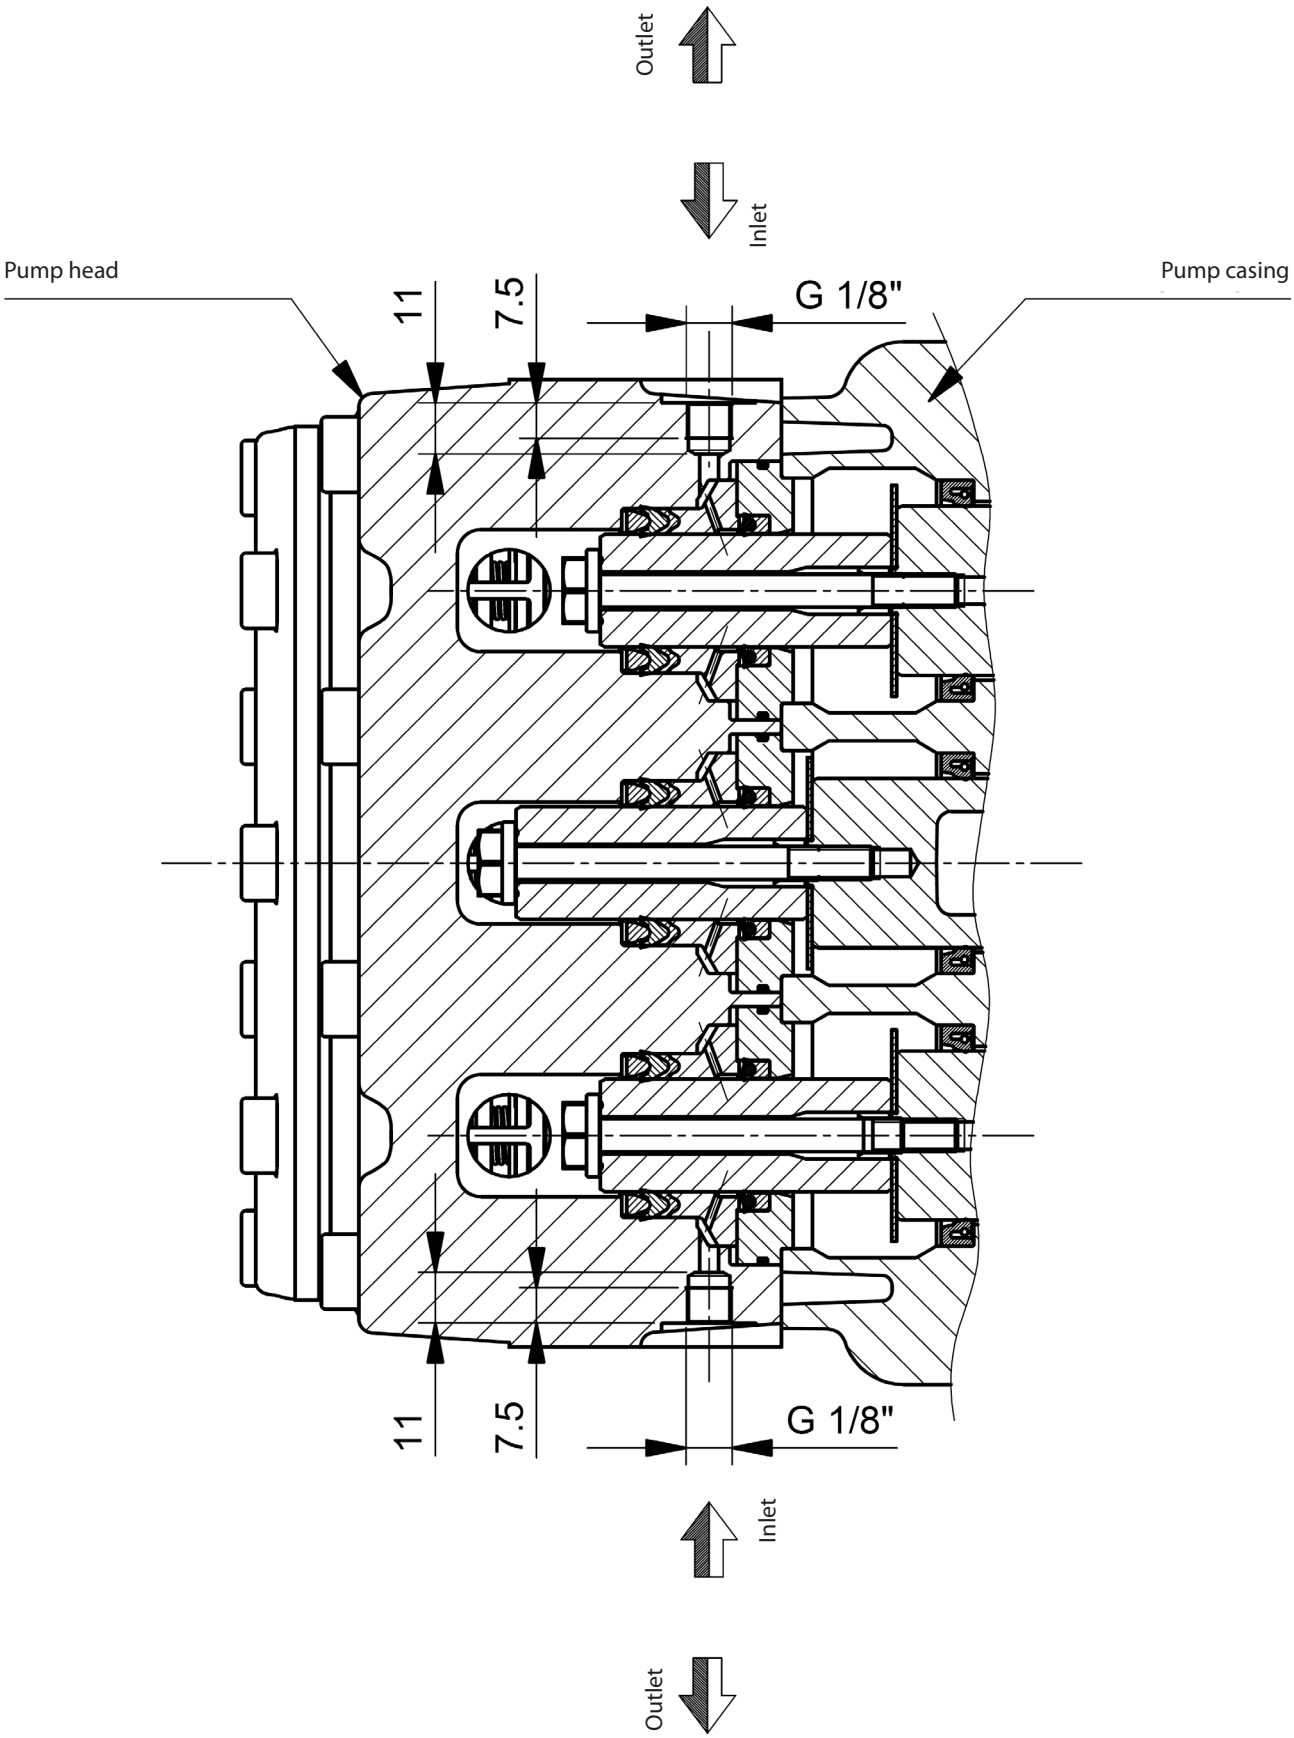

18 DECLARATION OF INCORPORATION

DECLARATION OF INCORPORATION

(In accordance with Annex II of European Directive 2006/42/EC)

The manufacturer **INTERPUMP GROUP S.p.A. - Via E. Fermi, 25 - 42049 - S. ILARIO D'ENZA - Italy DECLARES** that the product identified and described as follows:

Name:	Pump
Type:	Reciprocating plunger pump for high pressure water
Trademark:	INTERPUMP GROUP
Model:	70 KEB series

Is found to comply with the Machinery Directive 2006/42/EC
Standards applied: UNI EN ISO 12100:2010 - UNI EN 809:2000

The pump identified above meets all the essential safety and health protection requirements as listed in section 1 of Annex I of the Machinery Directive:
1.1.2 - 1.1.3 - 1.1.5 - 1.3.1 - 1.3.2 - 1.3.3 - 1.3.4 - 1.5.4 - 1.5.5 - 1.6.1 - 1.7.1 - 1.7.2 - 1.7.4 - 1.7.4.1 - 1.7.4.2 and the relevant technical documentation has been compiled in accordance with Annex VII B.

In addition, the manufacturer undertakes to make available, following a reasoned request, a copy of the relevant technical pump documentation in the manner and terms to be defined.


The pump should not be put into service until the plant to which the pump is to be incorporated has been declared in accordance with the provisions of the relevant directives and/or standards.

Person authorized to compile the technical file — Name: Maurizio Novelli
Address: INTERPUMP GROUP S.p.a. - Via E. Fermi, 25 - 42049 - S- ILARIO D'ENZA (RE) - Italy

Person authorized to draw up the declaration: CEO Ing. Paolo Marinsek

Reggio Emilia - December 2012

Signed:

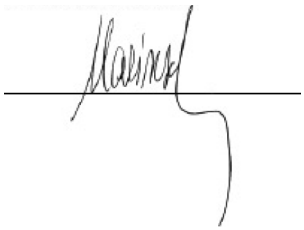

INTERPUMP GROUP

Pratissoli

Copyright di queste istruzioni operative è di proprietà di Interpump Group.

Le istruzioni contengono descrizioni tecniche ed illustrazioni che non possono essere elettronicamente copiate e neppure riprodotte interamente od in parte né passate a terzi in qualsiasi forma e comunque senza l'autorizzazione scritta dalla proprietà. I trasgressori saranno perseguiti a norma di legge con azioni appropriate.

Copyright of these operating instructions is property of Interpump Group.

The instructions contain technical descriptions and illustrations which may not be entirely or in part copied or reproduced electronically or passed to third parties in any form and in any case without written permission from the owner. Violators will be prosecuted according to law with appropriate legal action.

D'après les lois de Copyright, ces instructions d'utilisation appartiennent à Interpump Group.

Les instructions contiennent des descriptions techniques et des illustrations qui ne peuvent être ni copiées ni reproduites par procédé électronique, dans leur intégralité ou en partie, ni confiées à des tiers sous quelque forme que ce soit, en l'absence de l'autorisation écrite du propriétaire. Les transgresseurs seront poursuivis et punis par la loi.

Copyright-Inhaber dieser Betriebsanleitung ist Interpump Group.

Die Anleitung enthält technische Beschreibungen und Abbildungen, die nur mit vorheriger schriftlicher Genehmigung des Copyright-Inhabers elektronisch kopiert, zur Gänze oder teilweise reproduziert oder in jeglicher Form an Dritte weitergegeben werden dürfen. Bei Verstößen drohen Rechtsfolgen.

El copyright de estas instrucciones operativas es propiedad de Interpump Group.

Las instrucciones contienen descripciones técnicas e ilustraciones que no pueden ser copiadas electrónicamente ni reproducidas de modo parcial o total, así como pasadas a terceras partes de cualquier forma y sin la autorización por escrito de la propiedad. Los infractores serán procesados de acuerdo a la ley con las medidas adecuadas.

Os direitos autorais destas instruções operacionais são de propriedade da Interpump Group.

As instruções contêm descrições técnicas e ilustrações que não podem ser eletronicamente copiadas ou reproduzidas inteiramente ou em parte, nem repassar a terceiros de qualquer forma sem autorização por escrito da proprietária. Os infratores serão processados de acordo com a lei, com as ações apropriadas.

Авторские права на данные инструкции по эксплуатации принадлежат компании Interpump Group.

Инструкции содержат технические описания и иллюстрации, которые не подлежат электронному копированию, а также не могут целиком или частично воспроизводиться или передаваться третьим лицам в любой форме без письменного разрешения владельца. Нарушители будут преследоваться по закону с применением соответствующих санкций.

这些操作说明的版权由Interpump集团拥有。

这些操作说明的版权由INTERPUMP集团拥有。未经本集团的书面许可，手册内含的技术说明和插图不得进行全部或部分电子复制或转载，也不得以任何形式转给第三方。违者将依法追究法律责任。

حقوق الطبع والنشر لهذه التعليمات العملية هي مملوكة لمجموعة Interpump Group.

تحتوي الإرشادات على توصيفات تقنية وشروحات لا يمكن أن يتم نسخها إلكترونياً أو إعادة صياغتها وإنتاجها سواء بشكل كلي أو جزئي ولا يمكن نقل ملكيتها لأطراف ثالثة أخرى بأي شكل من الأشكال دون الحصول على موافقة مسبقة مكتوبة من المالك. منْ يخالف ذلك يعرض نفسه للملاحقة القانونية وفقاً للقانون.

I dati contenuti nel presente documento possono subire variazioni senza preavviso.

The data contained in this document may change without notice.

Les données contenues dans le présent document peuvent subir des variations sans préavis.

Änderungen an den in vorliegendem Dokument enthaltenen Daten ohne Vorankündigung vorbehalten.

Los datos contenidos en el presente documento pueden sufrir variaciones sin previo aviso.

Os dados contidos no presente documento podem estar sujeitos a alterações, sem aviso prévio.

Данные, содержащиеся в этом документе, могут быть изменены без предварительного уведомления.

本文件所载资料如有变更，恕不另行通知。

يمكن تغيير البيانات الواردة في هذه الوثيقة دون سابق إنذار.

Cod. 70980803/4- Cod.IE 28600000554/4 - 22/04/2013

42049 S.Ilario—Reggio Emilia (Italy)
Tel. +39-0522-904311
Fax +39-0522-904444
E-mail : info@interpumpgroup.it
http://www.interpumpgroup.it

INTERPUMP GROUP

AZIENDA CON SISTEMA DI GESTIONE QUALITÀ CERTIFICATO DA DNV = ISO 9001 =